



This procedure for “*Remote key Button Replacement for Mini Cooper, BMW.*” was prepared by Polmex – Western Australian manufacturer of Silicone Button Replacements for remote key controls of various car makes and models: Land Rover, Range Rover, Toyota, Mitsubishi, Kia, Holden, Commodore, Ford, Hyundai, BMW, ...and more

For Orders please visit us on line at [www.polmex.com.au](http://www.polmex.com.au)

If **wing** button in your remote is silver (pic1), is mounted on back plate (pic2) that can be detached from remote (pic3) making room for new button (pic4): than our buttons will be suitable for your remote.

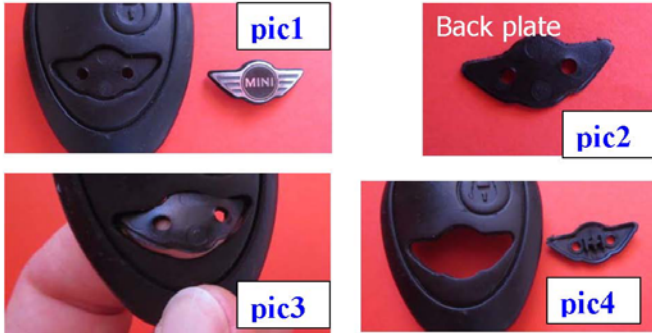

If **wing** button in your remote is integrated in rubber overlay, from which it has to be **cut out** making room for new button (pic1), than our buttons **Will Not Be Suitable** for your remote.


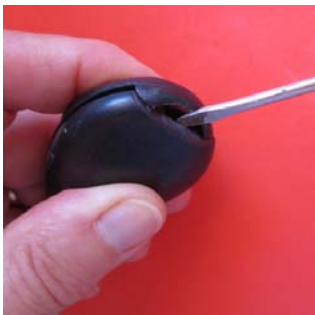


1. Prise **open** your remote using flat screwdriver.

2. **Separate** electronic parts from plastic shell. Do not remove battery.

3. Remove **Silver Wing** (if still attached to back mounting plate), by peeling it off.

4. Push out **back mounting plate** from top shell to make room for new button.

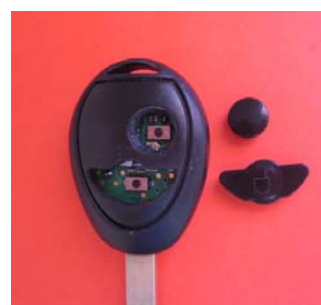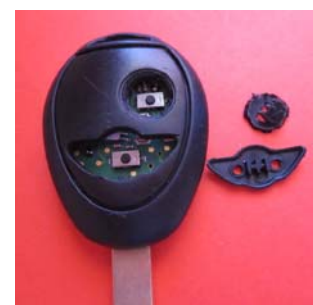

5. Once wing button is removed, carefully **cut out round button** using Stanley knife or scalpel.

6. When **both buttons are removed**, remote is ready for fitting our silicone button in.

7. **Push new buttons in.** NO glueing needed.

8. **Re-assemble remote** in reverse order. No re-programming needed.